

TRUGLO®

BWFISHING

PRODUCT: ACCU•X™ BOWFISHING REST (TG680B1)

WARNING: Serious bodily injury, death, or property damage can occur if this product is not installed and used properly.

INSTRUCTIONS:

INSTALLATION

1. Mount the rest to the bow using the mounting screw. The arrow should be perpendicular to the bow string and even with the mounting hole. The mounting bracket can be tilted as needed.
2. Tighten the anti-rotation set screw on the bracket (DO NOT OVER-TIGHTEN).
3. Adjust the rest for proper center shot and tighten the windage lock screw (DO NOT OVER-TIGHTEN). Be sure to keep the brush housing square to the arrow shaft.

LEFT-HANDED SETUP



1. Loosen the windage lock screw and remove the brush housing from the rest. Reinstall from the opposite side of the bracket.
2. Follow the standard installation instructions.

BRUSH REPLACEMENT

1. Brushes can be interchanged. If brush wear is experienced, the top brushes can be moved to the bottom locations.
2. Loosen the appropriate brush lock screw, and slide the brush out.
3. Install the new brush and tighten the lock screw (DO NOT OVER-TIGHTEN).

WARNING:

- Serious bodily injury, death, or property damage can occur if this product is not installed and used properly.
- It is recommended that a qualified archery technician install and inspect your equipment prior to use.
- Always inspect arrows and nocks for damage. Discard if cracked, splintered, or otherwise damaged.
- Always tie the bowfishing line to a properly functioning arrow slide.
- Never tie the bowfishing line directly to the arrow. This can cause the arrow to snap back at the shooter causing injury or death. Arrow snapback is caused by the bowfishing line becoming tangled with the bow string, the cables, the bow, a bow accessory, or the shooter.
- The arrow slide and bowfishing line must be in front of the arrow rest and bow riser at all times (on the target side).
- Never allow the arrow slide or bowfishing line to be behind the arrow rest or bow riser. Always check that the bowfishing line is free of knots and debris. The bowfishing line must be able to freely spool from the reel when shot. Always wet the bowfishing line prior to use.
- Always check that the arrow slide can move freely and is functioning properly.
- Always wear eye protection when using any archery product.

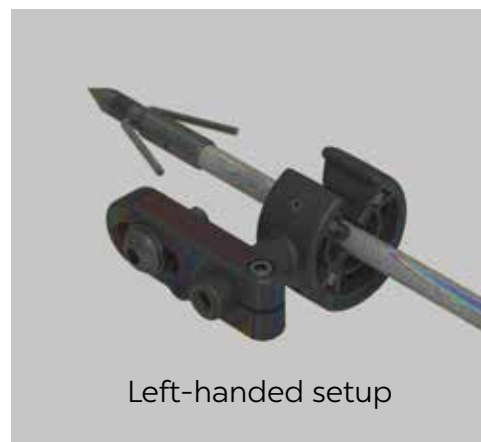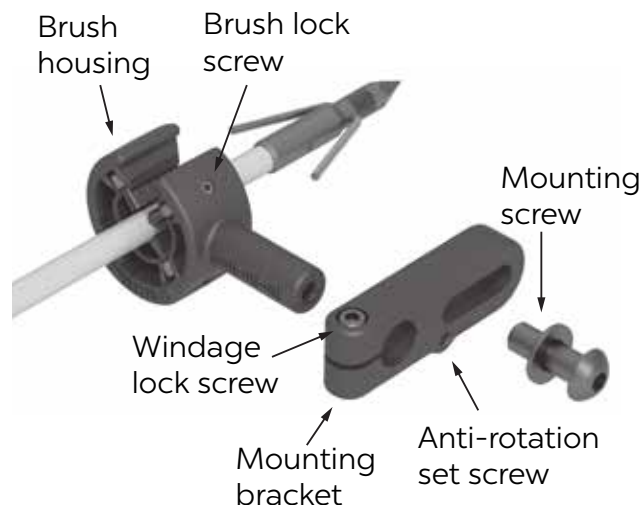

525 INTERNATIONAL PARKWAY
RICHARDSON, TEXAS 75081
P# 972.774.0300
F# 972.774.0323

WARNING: This product can expose you to chemicals including chromium, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

ART19A14JL

